



STAND FAN ASSEMBLING INSTRUCTIONS

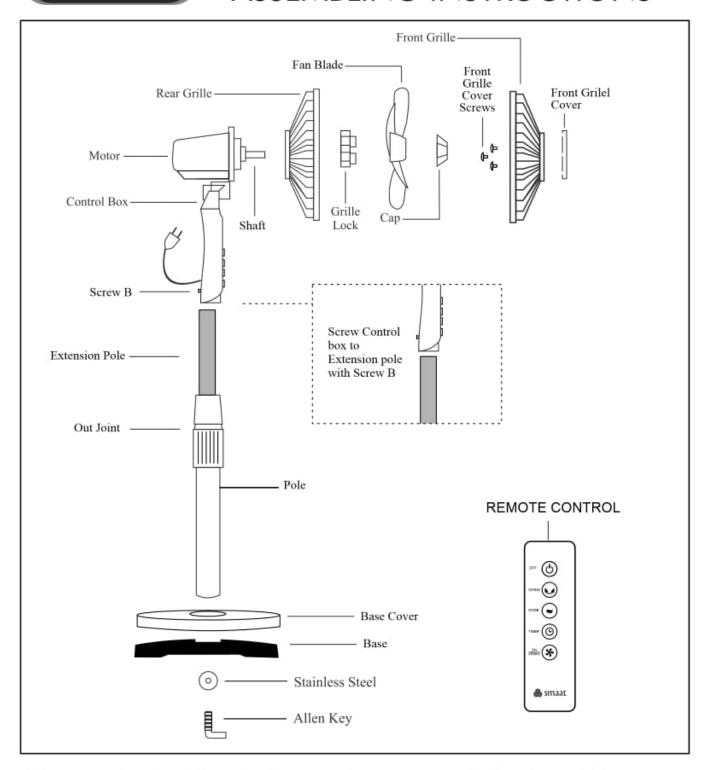



- 1. Unscrew out-joint, pull the extension pole out of the pole, and tighten the out-joint again.
- 2. Put the Base cover on the base and ensure firmness.
- 3. Insert the Pole in the provision made on the Stand Cover and Base. Add the Stainless steel underneath the Base then tighten with the Allen key.
- 4. Place the Control box firmly on top of the Extension pole, tighten Screw B with a Screw driver.


For Remote Control:


- 1. Remove the cover from the back of the remote and insert two batteries.
- 2. Aim at switch board when operating the remote control
- Push button to choose speed, Mode, Swing, Timer or turn off.

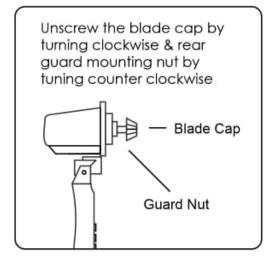


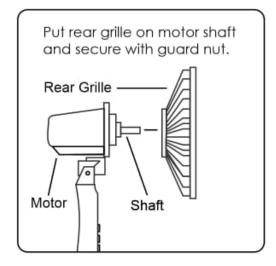

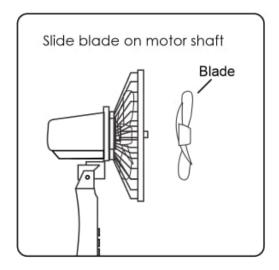

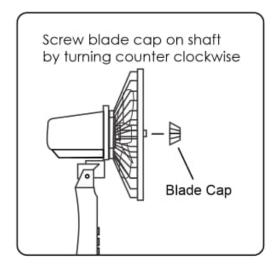

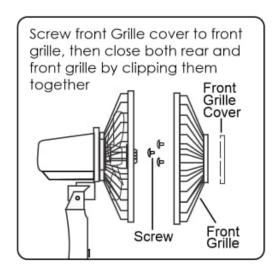

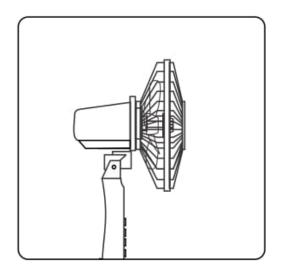

MAINTENANCE TIPS

- 1. Before cleaning, unplug fan first.
- 2. Clean the fan with soft cloth and neutral detergent, but not gasoline or other solutions.
- Add a few drop of high quality lubricating oil to bearing of the motor before the first operation every year.



www.smaat.uk